

FORD

Note: The following procedures should cover most models. Find the closest match to your vehicle. If the procedure does not work, try following the instructions for a different model listed below.

FORD FALCON EF/EF (II) 1994-1996
FORD FALCON EL 1996-1998
FORD FALCON AU/AU (II) 1998-2002
FORD FALCON XH LONGREACH 1996-1999

FORD FAIRLANE NF/NF (II) 1994-1996
FORD FAIRLANE NL 96-98
FORD FAIRLANE AU/AU (II) 1999-2002

FORD FAIRMONT EF/EF (II) 1994-1996
FORD FAIRMONT EL 96-98
FORD FAIRMONT AU/AU (II) 1998-2002

FORD LTD DF/DF (II)/ DL 1994-1998
FORD LTD AU/AU (II) 1999-2002

1. Ignition ON.
2. Press and hold down button A (trip meter reset button). The trip meter will display "0" while the reset button is being pressed.
3. Continue to hold down button for approx 10 sec. Reset will be confirmed by a beep.
4. Ignition OFF.

Note: Trip meter button locations may vary between models.



FORD FALCON EF

FORD FALCON BA/BF 2002-2007

Notice: The BA/BF Falcon has no service light resetting procedure, however you may notice that an “S” is displayed in the dash. This light is a speed set monitor used for low speed travel, i.e. if you are traveling in a 60km zone and do not want to exceed the speed limit you can set the speed limitation. A beep will sound when the speed limit is exceeded.

To set speed:

1. Locate the “MODE” button on the LHS of the steering wheel, next to the controllers for the radio.
2. Press and hold down “MODE” button for approx 2 sec. Display will now read “S” and you will hear a beep.
3. The current set speed will also be displayed. To adjust set speed use the “+” to increase or “-” to decrease. If no more buttons are pressed, speed will be set after a few seconds.



FORD FALCON BA

FORD EXPLORER 1997-2001


1. Locate 3 buttons on the LHS instrument panel (INFO, SETUP and RESET).
2. Press INFO button. Display will now read “Press reset or system test”. Display will automatically flash through menu (e.g., tyres, brake etc).
3. When you see “Oil Life” displayed, press SETUP button.
4. Press and hold down RESET button to reset oil life to 100%. Reset will be confirmed by a beep.

Note: You may need to repeat the procedure if it does not work on the first go.

FORD COUGAR 1999-2002

Note: When a spanner symbol is displayed on the dash this indicates a service is required.

1. Ignition ON.
2. Hold down buttons SELECT and UNITS at the same time for approx 5 sec. Service is now reset.

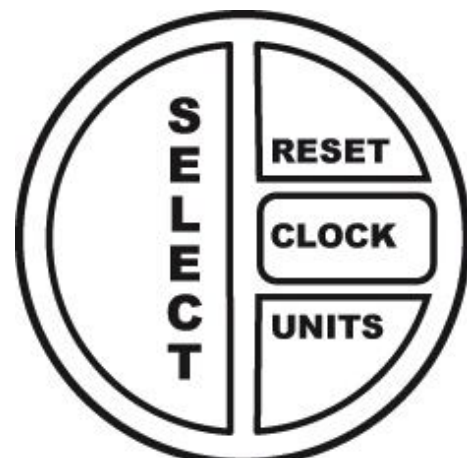


FORD HA MONDEO 1994-1996

1. Take out the glove box.
2. Ignition ON.
3. Press the reset button for approx. 4 sec (button has a spanner symbol and is located inside glove box)

FORD HB/HC MONDEO 1996-2000

1. Ignition ON.
2. Use a suitable tool (e.g. paperclip), press button A for approx. 4 sec (button located on dash).

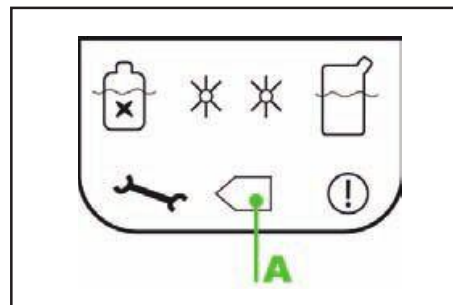

FORD HB/HC MONDEO

FORD TERRITORY

Notice: The Territory has no service light resetting procedure, however you may notice that an “S” is displayed in the dash. This light is a speed set monitor used for low speed travel, i.e. if you are traveling in a 60km zone and do not want to exceed the speed limit you can set the speed limitation. A beep will sound when the speed limit is exceeded.

To set speed:

1. Locate the “MODE” button on the LHS of the steering wheel, next to the controllers for the radio.
2. Press and hold down “MODE” button for approx 2 sec. Display will now read “S” and you will hear a beep.
3. The current set speed will also be displayed. To adjust set speed use the “+” to increase or “-” to decrease. If no more buttons are pressed, speed will be set after a few seconds.



FORD TERRITORY

FORD TRANSIT VH/VJ 2000-2006

1. Ignition ON.
2. Press down the brake and accelerator pedals at the same time for approx 20 sec. or until you see the service indicator flashing.
3. Ignition OFF.

FORD TRANSIT VM 2006-2007

1. Ignition ON.
2. Press down the brake and accelerator pedals at the same time for approx 20 sec. or until you see the service indicator flashing.
3. Ignition to "0" position.
4. Ignition to "II" position.